



**PARTNER** for inspiring & innovative display  
Design production for custom and project of signage display or branding nation wide.

## INSTALLATION GUIDE LIGHTBOX FABRIC FRAME L-100 2 SISI

### PERAKITAN



3. Rakit lampu LED bagian bawah hingga baut terpasang dengan plat. Kencangkan dengan obeng



8. Pasang Graphic Fabric kedalam Rangka Lightbox. Sisipkan karet silicon kedalam sekat aluminium profile.




4. Sisipkan bracket siku CF 4 pcs kedalam sekat yang telah disediakan. Kencangkan dengan obeng



9. Colokkan Male Adaptor ke Jack Female Lightbox. Colokkan steker adaptor ke stop kontak listrik.



5. Sisipkan baut Lampu LED, Sisipkan bracket siku CF 4 pcs kedalam sekat yang telah disediakan. Kencangkan dengan obeng

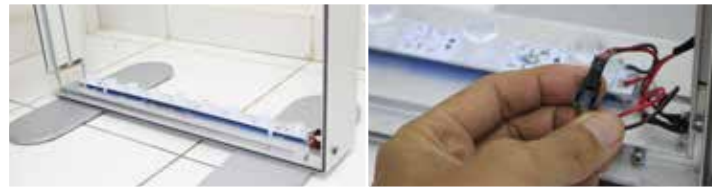

6. Rakit aluminium Profile bagian kiri kanan. Hubungkan konektor pin lampu dengan pin kabel



7. Pasang penyangga acrylic, Tutup aluminium profile bagian atas. Hubungkan konektor pin lampu dengan pin kabel



- SELESAI -



### KOMPONEN

1. Aluminium Profile FF L-100 Kiri Kanan ..... 2 pcs
2. Aluminium Profile FF L-100 Atas bawah ..... 2 pcs
3. Base Square Plate 40 x 10 cm ..... 2 pcs
4. Acrylic Penyangga ..... 1 pc
5. LED SideLight Strip 18 LED 22 W (LED LD319A) ..... 2 pcs
6. Bracket Siku CF ..... 8 pcs
7. Adaptor 12v (3,5 / 4 A) ..... 1 pc
8. Graphic Fabric Frame ..... 2 pcs
9. Baut+Mur JF M8x30mm ..... 4 pcs



1. Masukkan Baut M8x30mm dari bawah base, letakkan aluminium profile yang terdapat lubang sesuai dengan Base.



2. Masukkan Plat untuk Lampu LED diantara 2 baut base. Ulangi langkah tersebut sampai kedua base terpasang plat.

PT. INNOVASI SARANA GRAFINDO

Jl. Lenteng Agung Raya No.15 (Jl. Baung No.2) Jakarta Selatan  
12610 Indonesia Phone: +62 021 7883 1075 Fax: +62 021 7883 1692  
email : [cs@innograph.com](mailto:cs@innograph.com) | [cs@displaystore.id](mailto:cs@displaystore.id)

main site : [www.innograph.com](http://www.innograph.com)  
online store : [www.displaystore.id](http://www.displaystore.id)